

Pablo®

CONTOUR

ASSEMBLY & INSTALLATION INSTRUCTIONS

INFO@PABLODESIGNS.COM
888 MARIN STREET
SAN FRANCISCO, CA
94124

PABLODESIGNS.COM



Pablo®

CONTOUR


CONTOUR MODELS



 TABLE SM




TABLE LG



FLOOR

CONTOUR TABLE MODELS

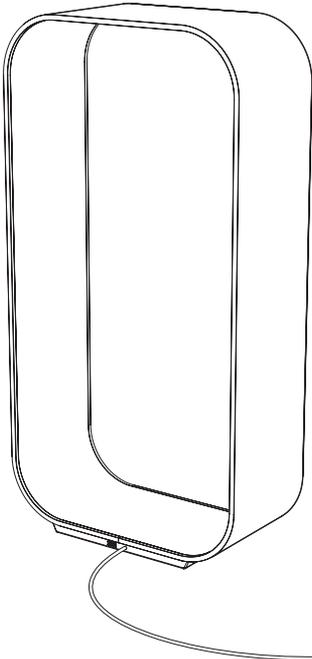

NOTE: CONTOUR TABLE USES 14.4W POWER SUPPLY

PLUG TYPES:



1. SLIDE PLUG INTO POWER SUPPLY
2. ALIGN CONNECTOR/POWER SUPPLY LOCKING FEATURES
3. INSERT CONNECTOR
4. TURN CONNECTOR 90 DEGREES TO LOCK

POWER SUPPLY LOCK

CONNECTOR LOCK

A. N AMERICA

B. UK

C. EU

D. AU


NOTE: CONTACT MANUFACTURER FOR ADDITIONAL PLUG TYPE REQUIREMENTS.

Pablo®

CONTOUR

CONTOUR TABLE MODELS

SWITCH FUNCTION AND USB CHARGING

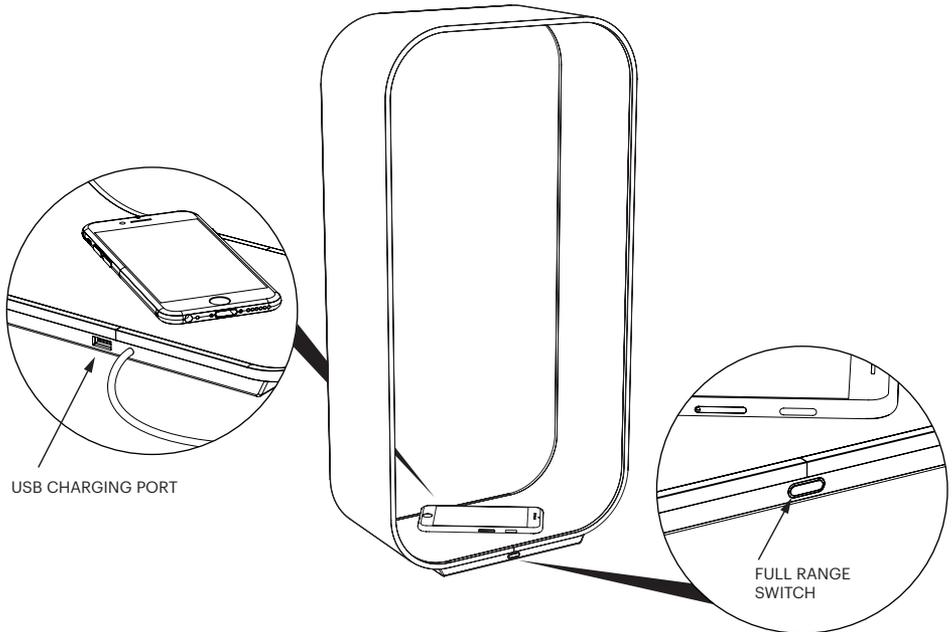

SWITCH FUNCTION

PRESS SWITCH BRIEFLY TO CYCLE THROUGH HIGH, LOW AND OFF. PRESS AND HOLD SWITCH TO ACTIVATE FULL RANGE DIM CONTROL. RELEASE FINGER FROM SWITCH WHEN DESIRED LIGHT LEVEL IS REACHED.

USB SPECIFICATIONS

SINGLE 5.0V USB OUTPUT SUPPORTS CHARGING FOR SMARTPHONES, TABLETS AND OTHER MOBILE DEVICES.
USB 2.0 OR 1.1 STANDARD CORD REQUIRED (CORD NOT INCLUDED)
OUTPUT VOLTAGE: 5VDC + - 5%
OUTPUT CURRENT: 1A MAX

NOTE

CONTOUR WILL CONTINUE TO CHARGE YOUR MOBILE DEVICE EVEN WHEN LAMP IS IN THE "OFF" POSITION.

PLEASE REFER TO YOUR MOBILE DEVICE'S USER MANUAL FOR COMPATIBILITY AND CHARGING TIME. PLEASE REFRAIN FROM LEAVING YOUR DEVICE PLUGGED IN FOR LONGER THAN THE RECOMMENDED TIME, OTHERWISE IT MAY RESULT IN OVER CHARGING.


CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

Pablo®

CONTOUR

CONTOUR FLOOR MODEL

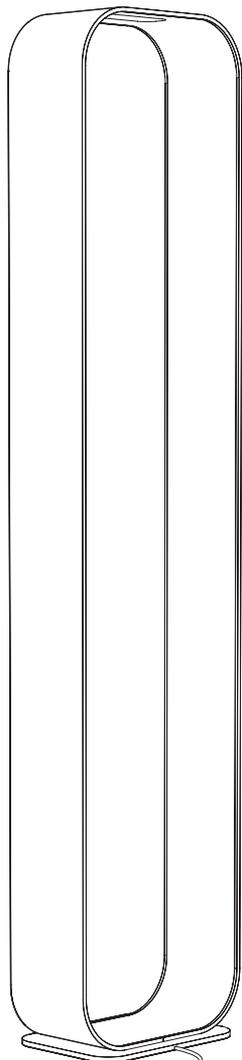

FULL RANGE
DIMMER


DIMMER FUNCTION

PRESS DIMMER BRIEFLY TO CYCLE THROUGH HIGH, LOW AND OFF. PRESS AND HOLD DIMMER TO ACTIVATE FULL RANGE DIM CONTROL. RELEASE DIMMER WHEN DESIRED LIGHT LEVEL IS REACHED.

CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

NOTE: CONTOUR FLOOR USES 24W POWER SUPPLY

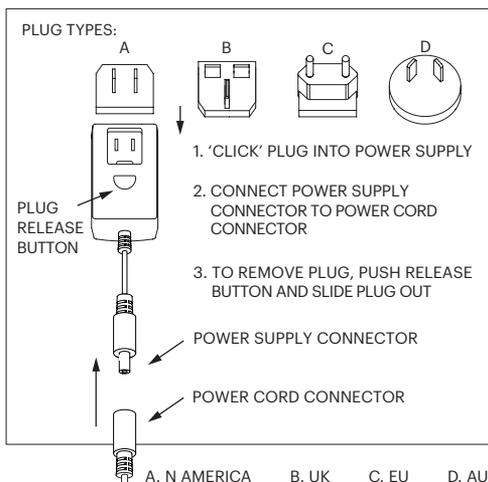

NOTE: CONTACT MANUFACTURER FOR ADDITIONAL PLUG TYPE REQUIREMENTS.